

Door Alarm
Keypad Controlled
User's Manual

WARNING
Risk of personal injury
.prolonged exposure to alarm siren
May cause pemanent hearing loss
CAUTION
Battenies may leak harmful liquids
or ignitable materials or explode
Causing iniury and produet damage
.Do not mix old and new or
Other betterypes
.Replace alle\baeries atthe
Same time
.Replace fully discharged
batteries immediately

SIREN
BATTERY
LOW
INDIGATOR
KEYPAD

MAGNETIC SENSOR
Mount magnetic sensors
So arrows line up

INSTALLNG BATTERLES

The keypad Door Alarm requies 3#AAA# Alkaline batteries (not included).If batteries need to Be replaced,the red indicator light will flash 6 times every 10seconds.Average battery life forr typical usage is year.This unit also works with the GE AC Adaptor GESECACI (not included)for plug in power To install the batteries

1.Remove screw at base of battery

Compartment located behind the unit andslide off cover.

2.Insert(3)#AAA#batteries noting the polarity diagram insode the batteru compartment

3.Replace cover and screw.

IMPORTANT: Remove batteries before storing the Alam and Remote for extended periods Batteries Corrode over time and may cause permanent damage

To the unit .Differies should not be mixed unit and
Disposed of properly

LEARN CHIME ALARM

SETTING THE 4-DIGIT CODE

1. Remove screw at base of battery compartment located behind the unit and slide offcover
2. press the LEARN button.
3. The red light will blink for 15 seconds.
During this time,input your4-digit code.A
Beep will confirm the input
4. Replace cover and screw.

LNSTALLATLON

Make sure the wire extends out from behind theunit

1. Using the screos provided,mount the main Siren towall.Make sure there is
Sufficent wire length to extend sensor to
Door frame
2. Using a strip of the double sided tape,
mount the sensor attached to the main
siren to the edge of the door frame as
shown below.
3. Using another strip of the double sided
tape,mount the unattached sensor to the
door,Make sure the arrows on the sensors
align,with less than 0.5in ,inbetween.

DOOR DOOR FRAME

less than 0.5in

Between units

OPERATNG IN THE ALARM MODE

1. Remove screw atbase of battery
Compartment located behind the unit and
Slide off cover.
2. Slide toggle switch to ALARM moce.
3. Replacde cover and screw.

Aming the Alarm:

Arm the alam by pressing your4-digitcode. Thre
Will be a 45-second exit delay before tle unit is
armed .The delay allows time for you to leave the
protected area oithout triggering the alarm.The
alarm will sound when the distance between the
magnetic unit and min unit is 0.5in or greater(i.e.the door is opened).

Disaming the Alarm:

When returning to the protected area,simplyi enter

Your 4-digit code within 30 seconds to deactivate.

NOTE: When testing, a cloth can be used to cover

OPERATING IN THE CHIME MODE

1. Remove screw at base of battery compartment located behind the unit and slide off cover.
2. slide toggle switch to CHIME mode.
3. Replace cover and screw.

Activating the Chime:

Activate the chime by pressing your 4-digit code. The Chime will now sound immediately if the distance between the main unit and magnetic unit is greater than 0.5 in. (i.e. the door is opened).

Deactivating the Chime:

Deactivate the chime by pressing your 4-digit code.

A deep tone on the fourth digit will confirm

deactivation.

CARE AND MAINTENANCE

To clean the unit housing, use a soft cloth slightly dampened with water and wipe dry. Do not use chemical agents as this may damage and discolor the unit.

WARNING

Limitations of Alarm products

This product should be tested weekly to make sure it is working properly. The product, if used properly, may reduce the risk of burglary, robbery, fire, or other adverse events, however, JASCO is not an insurer, this product is neither insurance nor a guarantee that such an event will be prevented, and users should protect themselves with proper insurance. JASCO makes no representation that this product cannot be compromised or circumvented, that it will provide an adequate warning or that it will prevent any personal injuries, property damage or other losses. Like any alarm product including expensive commercial systems it may be bypassed, it is subject to compromise and it may fail to warn for a variety of reasons including but not limited to: improper installation or positioning, improper maintenance, tampering, dead or improperly installed batteries, sensing limitations, component failures, smoke sensing. For wireless systems the functional range may be adversely affected by certain environmental conditions, radio frequency interference and obstructions between the transmitters and receivers. For systems using telephone lines the lines may be out of service or disrupted. For infrared products intrusions may be outside of a product's designed range and certain environmental

outside of a performance and audible alarm signals
may be outside of hearing range muted by doors walls and
floors unheard by deep sleepers or the hearing impaired or overwhelmed by other sounds
90 DAY LIMITED WARRANTY Jasco products Company
Warrants this product to be free from manufacturing defects for a
Period of ninety days from the originalng defects for a
Period of ninety days from the original date of consumer purchase This warranty is limited to the
repair or replacement of
This product only and does not extend to consequential or
incidental damage to other products that may be used with this
unit This warranty is in lieu of all other warranties express or
implied some states do not allow limitations on how long an
implied warranty lasts or permit the exclusion or limitation of
incidental or consequential damages so the above limitations
may not apply to you This warranty gives you specific rights
and you may also have other rights which vary from state to
return prepaid with dated proof of purchase to
Jasco products Company
311N.W.122nd
Oklahoma City ok 73114
45108 12/21/04